

# Important checks

1. If unit is plugged in and will not turn on after installation, make sure **all** of the circuit breakers in the unit are in the “ON” position.




Off position



On position

2. If the unit is powered on but the heaters are not turning on, the thermo fuses may have tripped during shipping. On Thaw Unit and Pasture 2 units, there is one located on the motor mounting bracket inside the service door as shown.

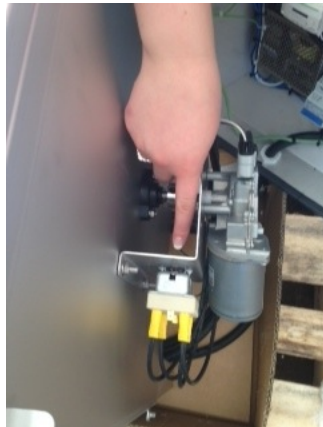

On the MAXX 4 models there are two Thermal Fuses; one mounted near the motor inside the front service panel and the other is behind the back service panel.



Front pannel



Back panel