

Installation of Motor Bolt

ColoQuick

Pasteur Basic2



Step 1: Tools Needed

Items: vise grips, hammer, punch, 7mm ratchet, and motor bolt.



Step 2: Moving motor

Gently move drive motor (as needed)



Step 3: Align vertically

Move until this pin is in a vertical position



Step 4: Remove pin

Use punch to remove the pin from shaft



Step 5: Remove pin

Gently use a hammer to remove pin (remember which way the cartridge holder is in tank)



Step 6: Old pin

Remove old pin (remember which way the cartridge holder is in tank)



Step 7: Insert new bolt

4mm bolt w/washer and insert, making sure the the cartridge holder is in correct position




Step 8: Self-locking nut

Put the washer and self-locking nut on



Step 9: Tighten

Use a small vise grips and 7mm socket wrench to tighten

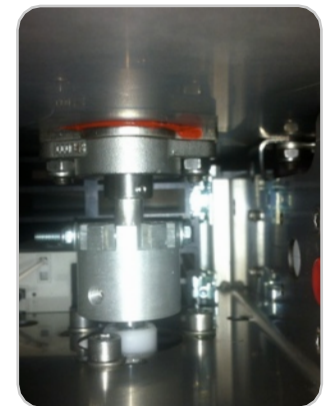

Step 10: Complete

Once nut is snug and secure you are done!