

Installation of Motor Speed Control "MSC"

ColoQuick

Pasteur Basic2




Step 1: Tools Needed

Items: Wire cutter/
Stripper, flat head screw-
driver, Motor Speed Control
box & wiring, USB Flash
Drive




Step 2: Identify wires

Right-to-Left
+,1,2,3,-
(2Blue,White,White,Empt-
y,White) careful to not
confuse white wires

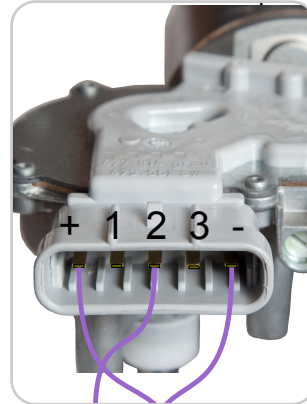


Step 3: Disconnect wires from the motor

Remove only 3 of
the 4 wires from the motor
pin connections #(+,2,-)

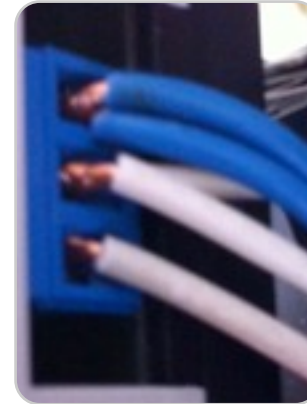


Step 3: Clip wire ends off

Remove wire connector
ends of the 3 of the
4 wires from the motor pin
connections #(+,2,-)

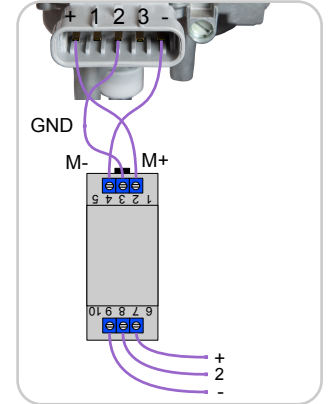

Step 5: Connect wires Mo- tor Speed Control box

Correspond each
wire to each point and se-
cure wire screw

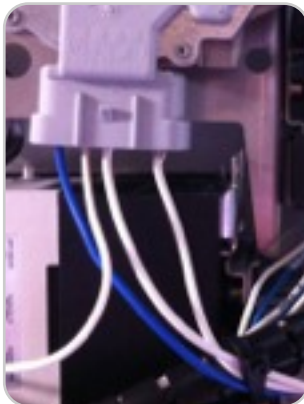

Step 6: Reconnect to Mo- tor

Connect the 3 wires
pre-installed on MSC to
motor pins correctly



Step 7: Connect to D-rail

There is an extra
place on rail to secure MSC
next to breaker



Step 8: Install

Carefully connect to the
the bottom of box to D-rail



Step 9: Install

Press firmly to engage clip
on top over rail



Step 10: Finalize

Items: Follow the next
page instructions for the
rest of the procedures