

Download of ALL Logs, Program and Settings

ColoQuick

Pasteur models:
Basic, Maxx4 & Maxx8

Menu Codes Downloads
3000: Data Log Files
3001: Error Log Files
7501: Save Program&S Files



Or



Step 1: Insert USB FLASH drive


Use clean USB FLASH drive. Always Format flash drive to FAT32 system for best transfer of files.

On older models remove (2) nuts to open main service door and access USB port directly on PLC controller board




Step 2: Entering Menu Code

Press "PRG" to access Menu Code. Enter menu code "3000" by pressing [Left] [Up] [Right] [Down] arrow keys. When entered press "OK".

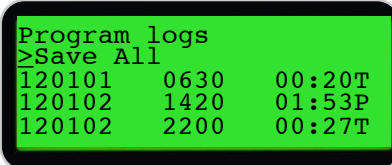

Step 3: Saving Files

Select "Save All" and press "OK". You may scroll logs to see each log by using [Left] [Right] keys.

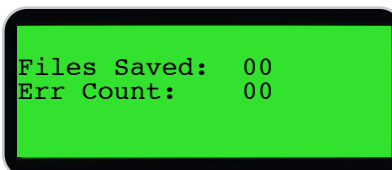


Step 4: Transfer onto USB Flash

Please wait... Watch "Files Saved" counter to increase. If "Err Count" occurs, you must try another USB FLASH drive or format flash drive to "FAT32" system and try again. Once complete the screen will return to previous screen (Program logs screen). Press the "ESC" once completed.




Step 5: Entering Menu Code

Press "PRG" to access Menu Code. Enter menu code "3001" by pressing [Left] [Up] [Right] [Down] arrow keys. When entered press "OK".

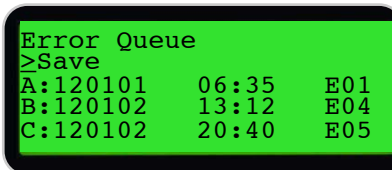

Step 6: Saving Files

Select "Save" and press "OK". You may scroll logs to see each log by using [Left] [Right] keys.

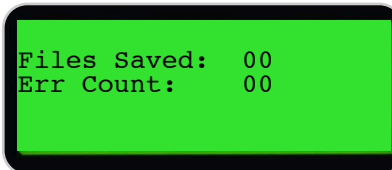


Step 7: Transfer onto USB Flash

Please wait until the files transfer completely. Watch "Files Saved" counter increase to 01. If "Err Count" occurs, you must try another USB FLASH drive or format flash drive to FAT32 system and try again. Once complete the screen will return to previous screen (Error Queue screen). Press the "ESC" once completed.




Step 7: Entering Menu Code

Press “**PRG**” to access Menu Code. Enter menu code “**7501**” by pressing arrow keys. When entered press “**OK**”.

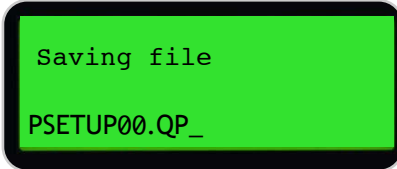


Step 8: Saving File

Automatically the file will be saved to the USB FLASH drive and return to the Home Screen

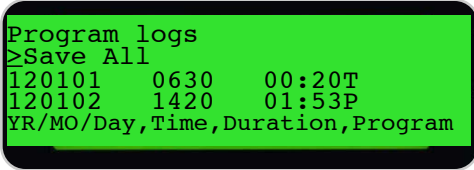

Understanding Program Logs

Displayed on screen is a list of logs that show, Yr./Mo./Day, time(24hr.) started, Start-Finish time, and program used T-Thaw/P-Pasteur

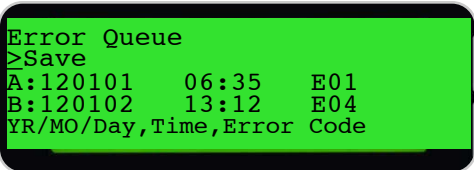

Understanding Error Logs

Displayed on screen is a list of error message logs that show, Yr./Mo./Day, time(24hr.) occurred, and the specific error code(refer to error code explanation below).

Finally: Remove USB FLASH Drive

Remove the USB FLASH Drive and reinstall the water tight cap or close the service door and reinstall the (2) nuts.



Retrieving the Files from USB FLASH Drive for emailing.

On the USB FLASH Drive you will find many files that are either end in “.TXT” or “.QP”. These files will need to be attached to an email and sent to tech support-”support@goldencalfcompany.com” for proper assistance. These files can be attached individually or by creating a folder or “Zip” folder, in any case they must all be sent to better assist your needs in the tech support department.