

Upload Firmware & Setup Files

ColoQuick

Pasteur models:
Basic, Maxx4 & Maxx8

Menu Codes Downloads
9999: Firmware upload
7500: Restore settings



Or



Step 1: Insert USB FLASH drive

Use clean USB FLASH drive. Always Format flash drive to FAT32 system for best transfer of files.

On older models remove (2) nuts to open main service door and access USB port directly on PLC controller board



Step 2: Entering Menu Code

Press “PRG” to access Menu Code. Enter menu code “9999” by pressing $\leftarrow \rightarrow$ arrow keys. When entered press “OK”.

SW Upgrade activated
Please wait ...

Please wait... Watch to see “App img file found” on screen. If “App img file not found” occurs, you must try another USB FLASH drive or format flash drive to FAT32 system, download “.hex” file and try again. Once complete it will display Firmware version and return to home screen.

Step 3: Upgrading activation

New application
Transport init.
App img file found_

Sw Upgraded

Pasteur Model

Ver. 2.41a / 206
BSL: 5

Pasteur Model


1-14-2013 20:10
T: 113°F 3



Step 2: Entering Menu Code

Press “PRG” to access Menu Code. Enter menu code “7500” by pressing \leftarrow \rightarrow \rightarrow \rightarrow arrow keys. When entered press “OK”.

Step 3: Upgrading




```
Select File:
>_PSETUP00.QP
```

Press the \rightarrow to select the “PSETUPXX.QP” file. The file name beginning with the underscore “_” flashing is the file that will be uploaded. When selected press “OK”. Please wait... Watch to see “File Loaded!” on screen. Once complete it will return to home screen.



```
File Loaded!
```

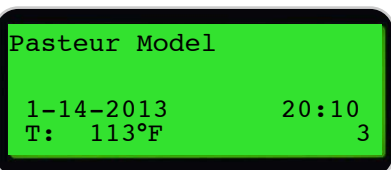

```
Pasteur Model
1-14-2013      20:10
T: 113°F      3
```

Finally: Remove USB Flash drive and close external USB port with water tight cap.

Remove USB Flash drive and replace cap or close service door and seal. If assistance is need contact-
support@goldencalfcompany.com